

Align template to rear edge of recess





Align template to rear edge of recess




SK03 STACK KIT MOUNTING INSTRUCTIONS AND PATTERN

FOR USE WITH TVM63X OR DV6400X 110V ELECTRIC DRYER & ARWXF129W OR WFL1300XD FRONT-LOADING WASHER

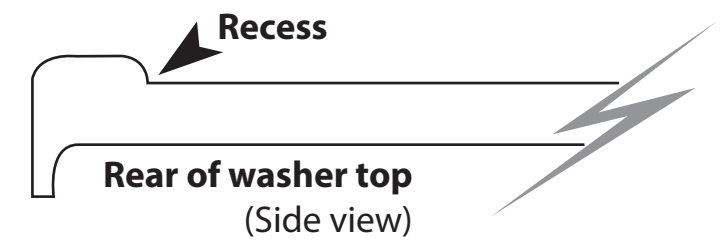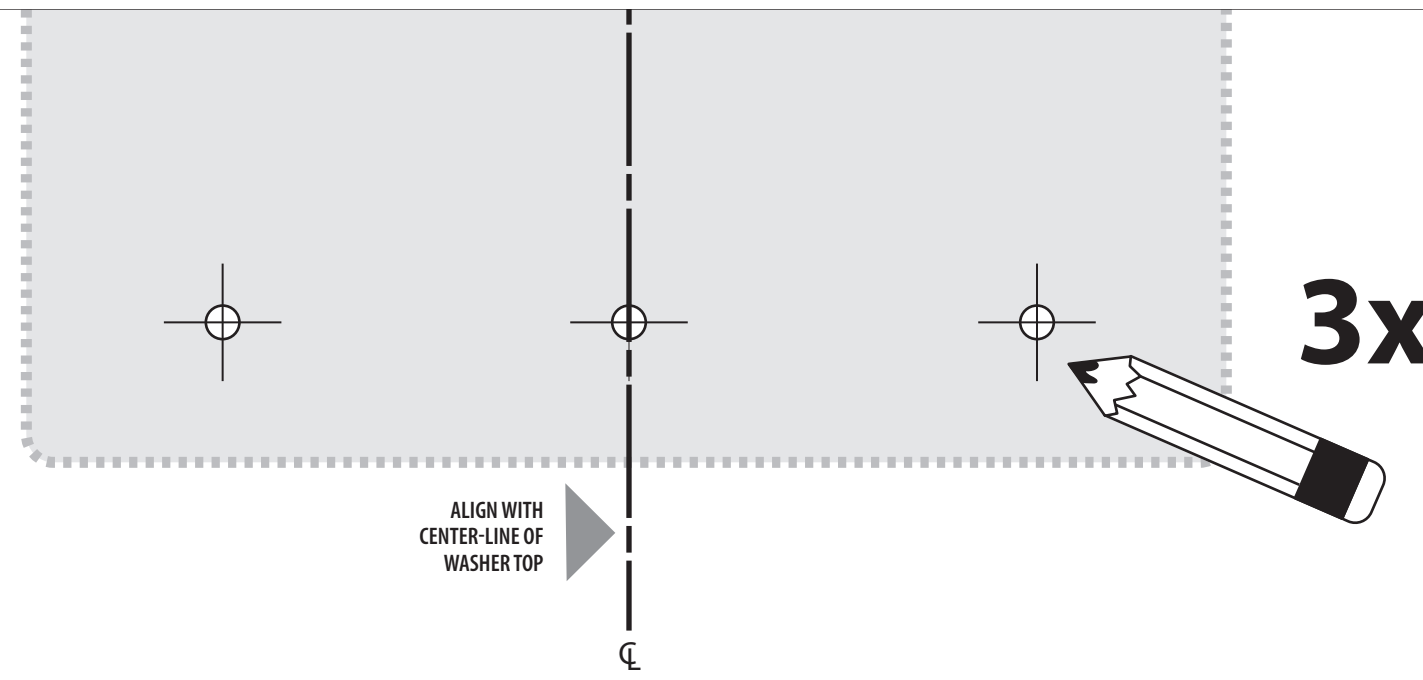


- 1x **C**
- 1x **E** **F**
- 1x **E** **G**
- 7x **D** **D**
SIZE 3/32"
DRILL BIT NOT INCLUDED
- 3x **F**


TVM63XNA or DV6400X Dryer

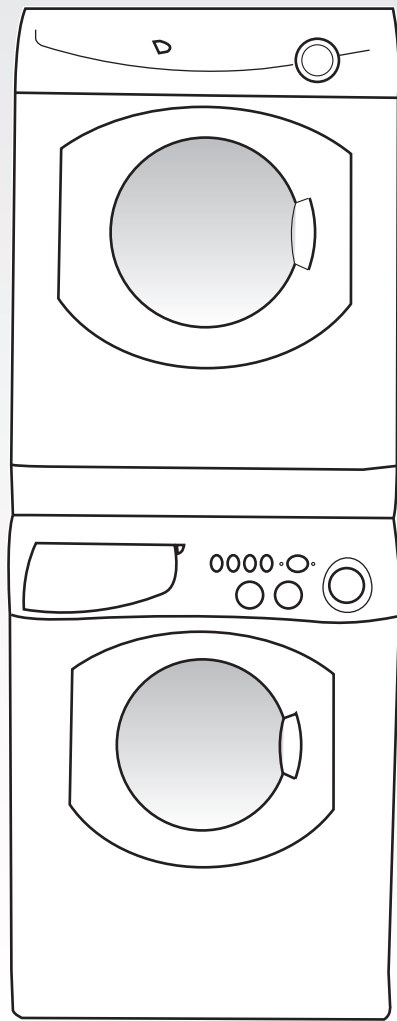


ARWXF129W or WFL1300XD Washer

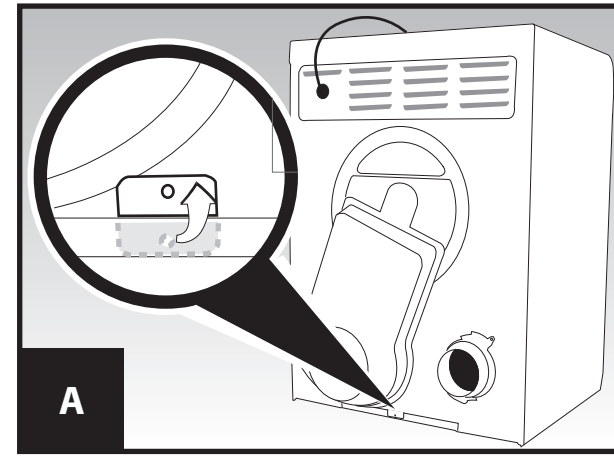


A Bend tab up so rear bracket can be inserted later

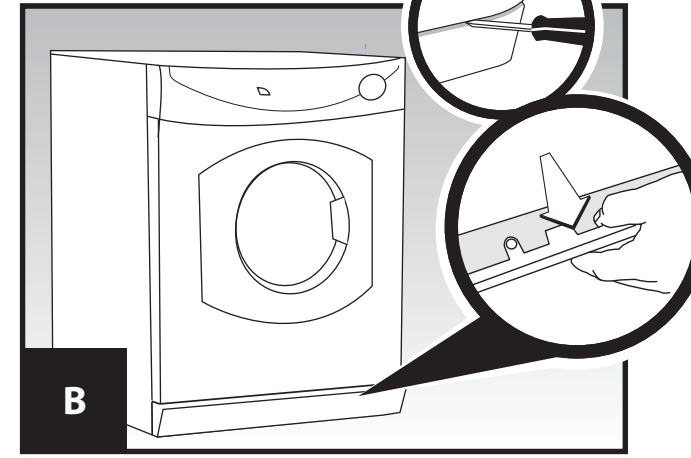


B Remove dryer kick-plate

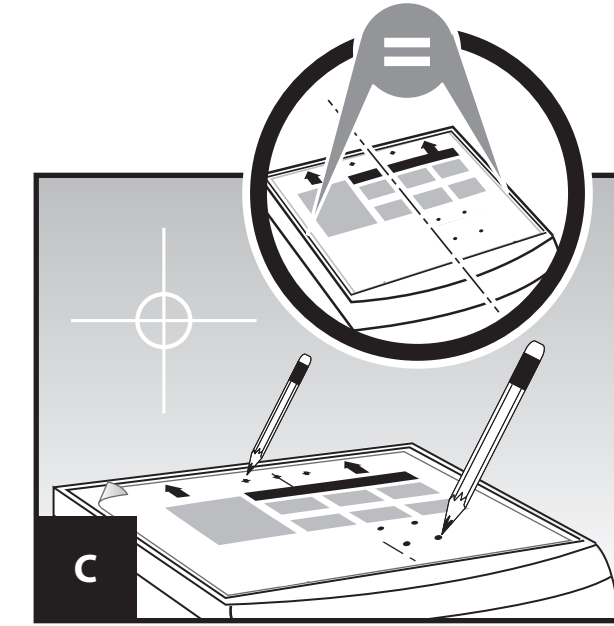


C Use pattern to mark drill hole positions on washer top

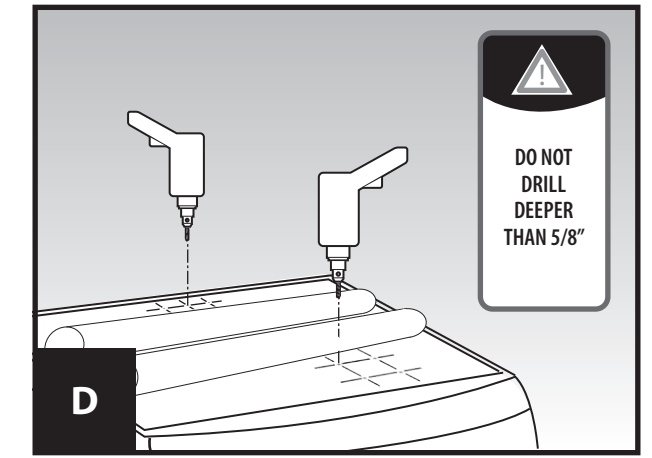


D Drill holes into washer top

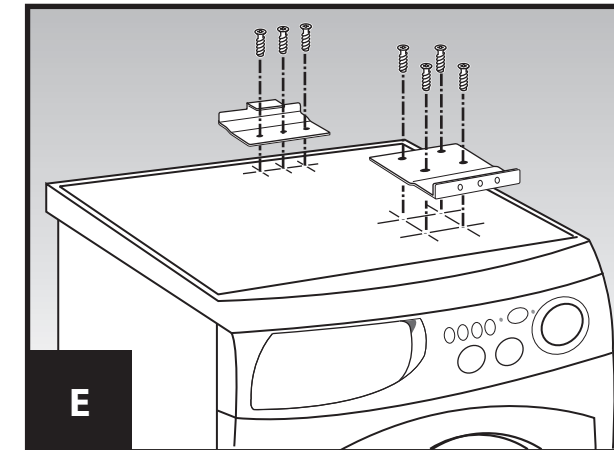


E Secure brackets to washer top

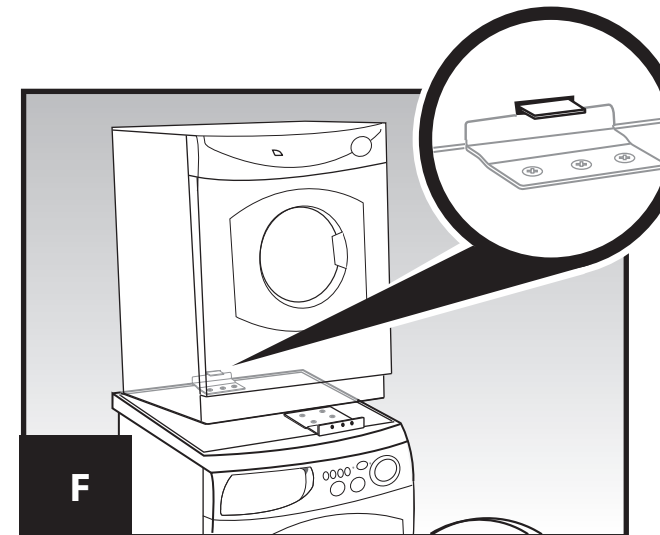



F Insert rear bracket into dryer

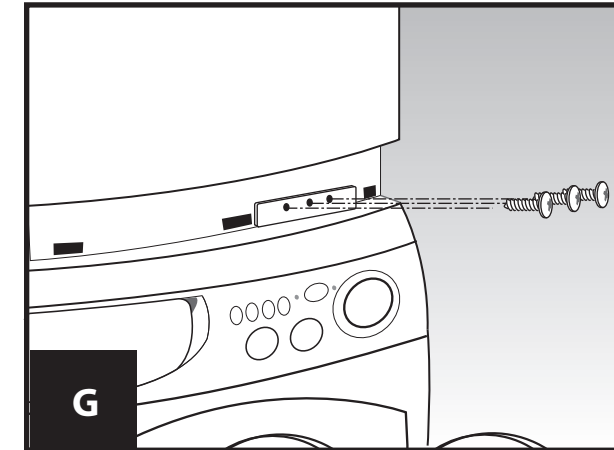




G Secure front bracket to dryer

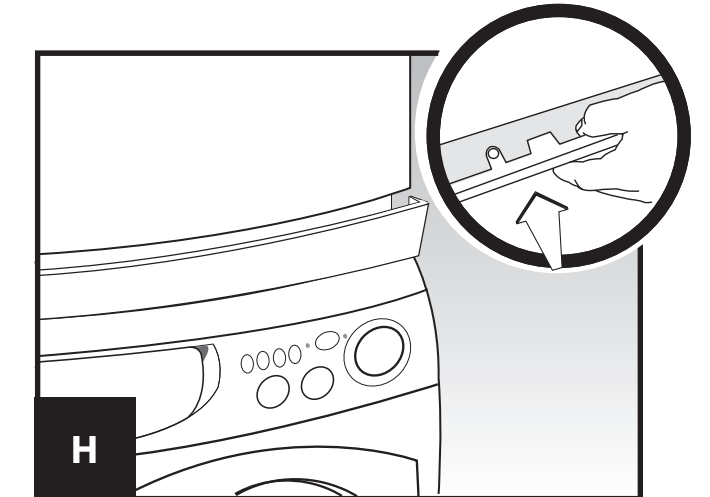

H Reinstall dryer kick-plate

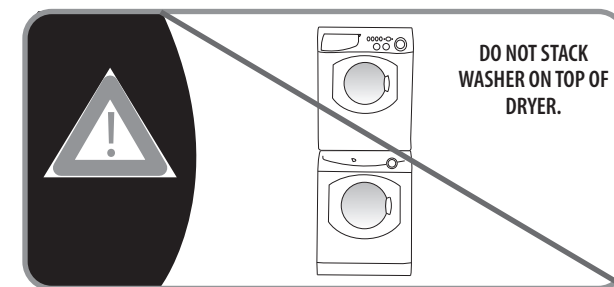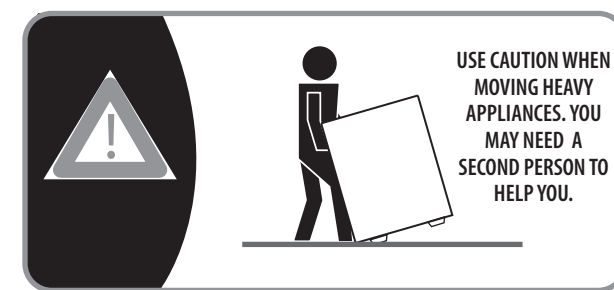

4x

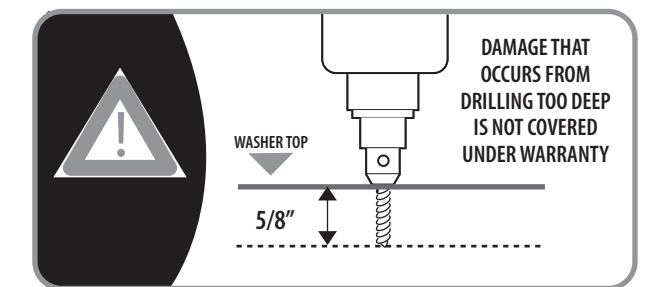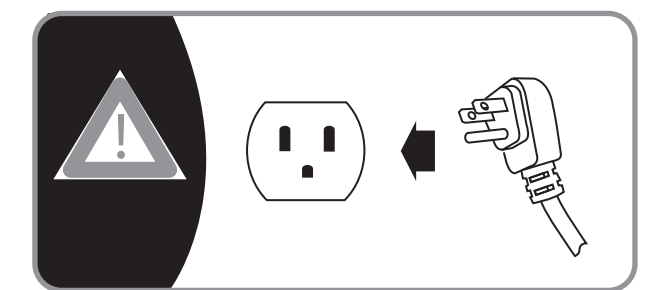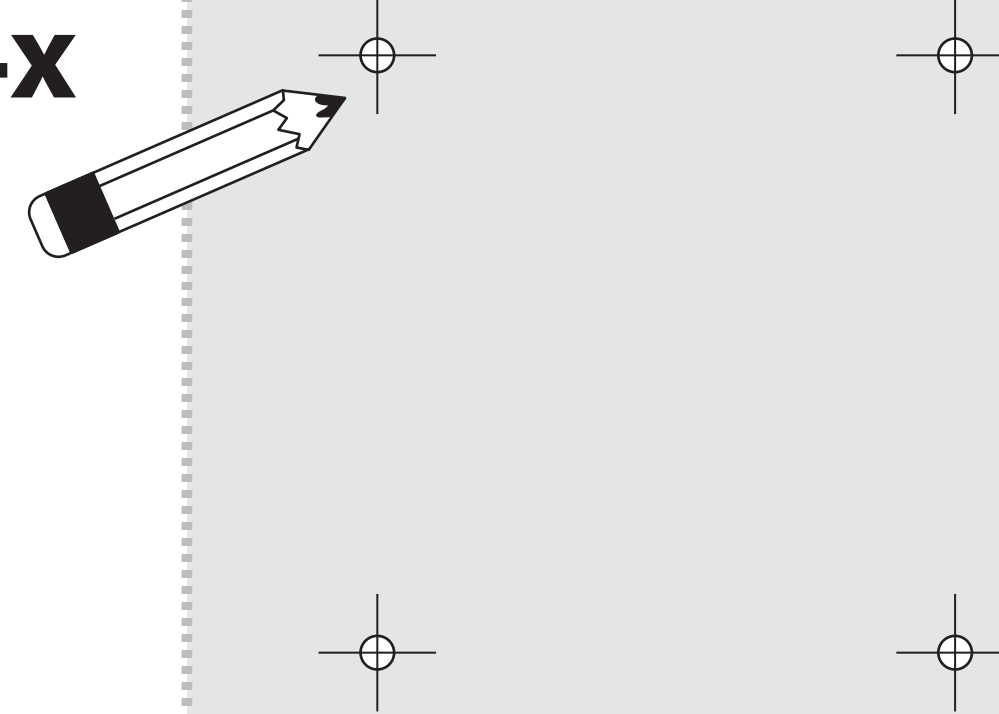

USE ONLY SCREWS FROM KIT