




# STOP




## TRANSIT SCREWS, GROMMETS, AND TUBES MUST BE REMOVED!

For transportation, the inside of the machine is supported by screws, rubber grommets, and plastic tubes. These items **MUST** be removed before operating the machine.

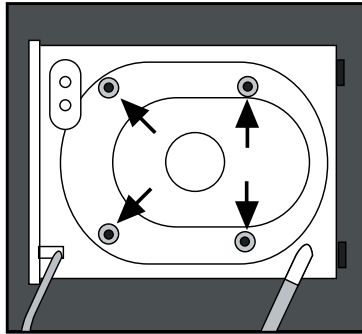

Back

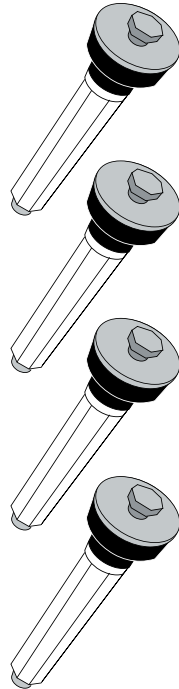

1. AFTER positioning the appliance near the installation location, remove the **four screws, and rubber grommets with the plastic tubes that are attached to them.**
2. Use the plastic plugs (provided) to cover the holes. **DONE.**

NOTE: Remove this notice at time of installation. Retain this notice with transit screws, spacers, and rubber tubes. These items should be reinstalled to prevent damage if or when the machine is transported in the future.




**IMPORTANT: TRANSIT SCREWS, RUBBERGROMMETS, AND PLASTIC TUBES MUST BE REMOVED BEFORE OPERATING THE MACHINE.** Failure to remove these items, or removing these items prior to moving the machine near its' final installation location, will result in improper operation and possible damage to the appliance.


## ATTENTION:

### RV and Marine Installations


SecureFit™ Installation Brackets (*Part No. MK01*) are available to prevent the washer or washer-dryer from shifting about in mobile installations.

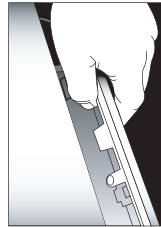

By keeping the appliance in place, SecureFit™ brackets will help put a stop to avoidable service requests due to,

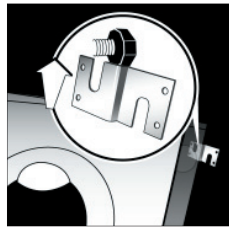


- kinked inlet hoses
- disconnected dryer vent hoses
- crushed dryer vent hoses
- blocked dispenser drawers
- knobs rubbing on closed doors
- scuffed cabinet woodwork

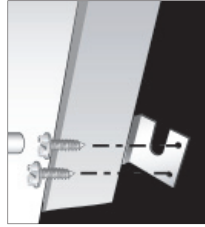

### MK01 Kit (Sold Separately):

Includes two galvanized brackets and four self-tapping screws.



Splendide Div. Westland Sales  
 15650 SE 102nd Ave. Clackamas, OR 97015  
 Tel: 1-800-356-0766, ext. 5  
[www.splendide.com](http://www.splendide.com)